



E-Revo Brushless Spur Gear Magnet Installation

Covers Part Number(s):
6538, 6540, 5677R



Tools Needed:





- 2.0mm hex wrench
- 2.5mm hex wrench
- 3.0mm hex wrench

Required:

- Magnet Mount 6538
- Magnet 6538 or 6540
- Gear cover 5677R

Installation Steps:

1. Using a 2.5mm hex wrench, remove the spur gear cover by removing the 3X8 CS screw (A).
2. Remove motor mount screw (using 3.0mm hex wrench) and remove the motor by sliding it rearward off of the motor mount (B).
3. Remove the three 3X6 CS spur gear screws (C). These will not be used again.
4. Install magnet into magnet holder with the red line facing out (D) and secure the magnet holder to the spur gear using the three included 3X8 CCS screws (E).
5. Reinstall motor. Ensure proper gear mesh. Refer to the users manual for detailed instructions.
6. Reinstall spur gear cover.

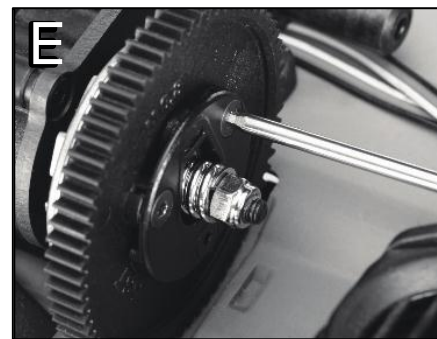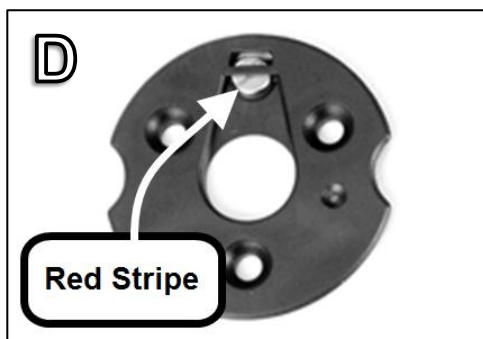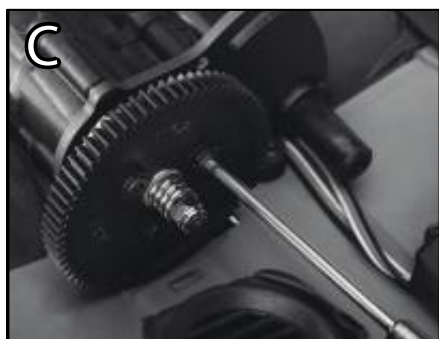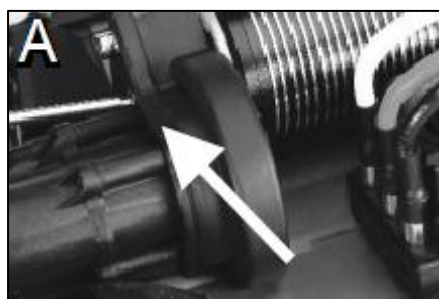

If you have questions or need technical assistance, call Traxxas at

1-888-TRAXXAS

(1-888-872-9927) (U.S. residents only)

TRAXXAS.COM

Traxxas, 1100 Klein Road, Plano, TX 75074, Phone: 972-265-8000, Fax: 972-265-8011, e-mail:
support@Traxxas.com