




## E-Revo Brushless Temp Sensor Installation

Covers Part Number(s):  
6535, 6521

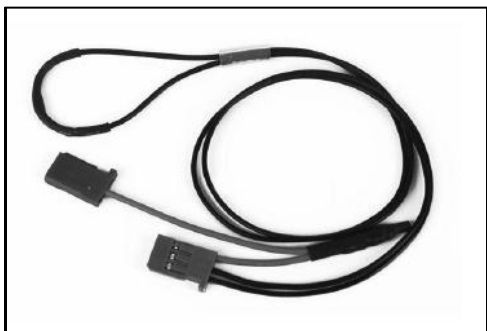

### Tools Needed:



- 2.0mm hex wrench
- 3.0mm hex wrench

### Required:

- Temp Sensor 6521
- Wire Clamp 6535

### Installation Steps:

1. Remove motor mount screw (using 3.0mm hex wrench) and remove the motor by sliding rearward off of the motor mount (A).
2. Remove wire cover and upper receiver box cover (B).
3. Route temp sensor through cover and plug the grey connector into V/T slot on receiver (C). The red connector will only be used if your vehicle is equipped with a voltage sensor. If not used, coil the wire and place beside the receiver unplugged.
4. Reinstall wire cover and upper receiver box cover (add grease to foam pads on receiver box to ensure watertight seal).
5. Route sensor under motor. Reinstall motor by securing with motor mount screw. Refer to instruction manual for proper gear mesh procedure.
6. Insert temp wire sensor into plastic bracket (included) (D). Peel backing off of thermal pad and place on plastic bracket (E).
7. Secure temp sensor to motor with tie wrap (F).

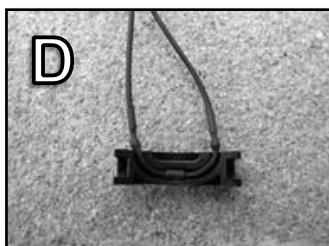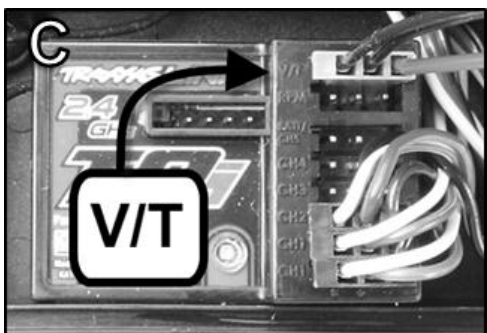

If you have questions or need technical assistance, call Traxxas at

# 1-888-TRAXXAS

(1-888-872-9927) (U.S. residents only)

TRAXXAS.COM

Traxxas, 1100 Klein Road, Plano, TX 75074, Phone: 972-265-8000, Fax: 972-265-8011, e-mail: support@Traxxas.com