




E-Revo Brushless Voltage Sensor Installation

Covers Part Number(s):
6521, 6541

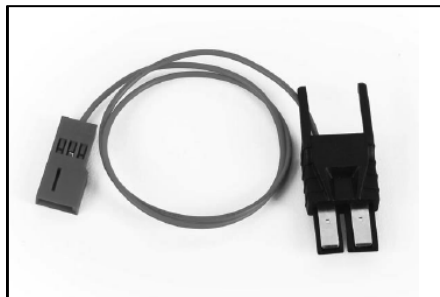


Tools Needed:

- 2.0mm hex wrench
- 3.0mm hex wrench

Required:

- Temp Sensor 6521
- Power Tap 6541

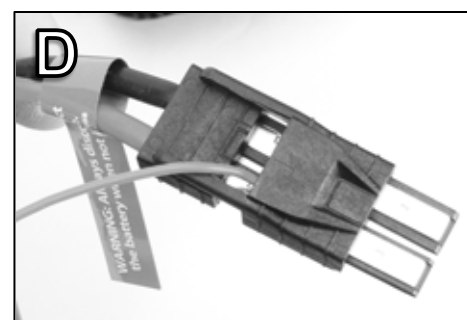

Installation Steps:

1. Remove motor mount screw (using 3.0mm hex wrench) and remove the motor by sliding rearward off of the motor mount (A).
2. Remove wire cover and upper receiver box cover (B).
3. Route red female plug from temp sensor (6521) out of receiver box (required for installation).
4. Route voltage wire along chassis and plug into red temp sensor connector (C).
5. Connect voltage sensor to battery plug with red wire (D).
6. Secure voltage sensor wire to the positive (red) battery cable with wire tie (included). Cut off excess wire tie.
7. Reinstall wire cover and upper receiver box cover (add grease to foam pads on receiver box to ensure watertight seal).
8. Reinstall motor and tighten motor mount screw securely. Ensure proper gear mesh. Refer to vehicles users manual for detailed instructions.

If you have questions or need technical assistance, call Traxxas at

1-888-TRAXXAS

(1-888-872-9927) (U.S. residents only)

TRAXXAS.COM

Traxxas, 1100 Klein Road, Plano, TX 75074, Phone: 972-265-8000, Fax: 972-265-8011, e-mail: support@Traxxas.com